

# Daytona

6,000lb Mid-Rise Scissor Lift

LMS6

User Manual



Model: LMS6 Serial No. \_\_\_\_\_

## AUTHORIZATION TO MARK

This authorizes the application of the Certification Mark(s) shown below to the models described in the Product(s) Covered section when made in accordance with the conditions set forth in the Certification Agreement and Listing Report. This authorization also applies to multiple listee model(s) identified on the correlation page of the Listing Report.

This document is the property of Intertek Testing Services and is not transferable. The certification mark(s) may be applied only at the location of the Party Authorized To Apply Mark.

<b>Applicant:</b>	Shanghai Lingtao Intelligent Technology Co., Ltd.	<b>Manufacturer:</b>	Yangzhou Jiangdu District DaWo Hydraulic Fittings Factory
<b>Address:</b>	Room 1128, Building 4, No. 1390, Jinhui Industrial Road, Fengxian District, Shanghai	<b>Address:</b>	No.26, Hezhuang Group, Zhong'ai Village, Daqiao Town, Jiangdu District, Yangzhou City
<b>Country:</b>	CHINA	<b>Country:</b>	CHINA
<b>Party Authorized To Apply Mark:</b>	Same as Manufacturer		
<b>Report Issuing Office:</b>	Intertek Testing Services Zhejiang Ltd. Hangzhou Branch		

**Control Number:** 5022109

**Authorized by:** \_\_\_\_\_

for L. Matthew Snyder, Certification Manager



This document supersedes all previous Authorizations to Mark for the noted Report Number.

This Authorization to Mark is for the exclusive use of Intertek's Client and is provided pursuant to the Certification agreement between Intertek and its Client. Intertek's responsibility and liability are limited to the terms and conditions of the agreement. Intertek assumes no liability to any party, other than to the Client in accordance with the agreement, for any loss, expense or damage occasioned by the use of this Authorization to Mark. Only the Client is authorized to permit copying or distribution of this Authorization to Mark and then only in its entirety. Use of Intertek's Certification mark is restricted to the conditions laid out in the agreement and in this Authorization to Mark. Any further use of the Intertek name for the sale or advertisement of the tested material, product or service must first be approved in writing by Intertek. Initial Factory Assessments and Follow up Services are for the purpose of assuring appropriate usage of the Certification mark in accordance with the agreement, they are not for the purposes of production quality control and do not relieve the Client of their obligations in this respect.

Intertek Testing Services NA Inc.  
545 East Algonquin Road, Arlington Heights, IL 60005  
Telephone 800-345-3851 or 847-439-5667 Fax 312-283-1672

<b>Standard(s):</b>	Garage Equipment [UL 201:2015 Ed.3+R:22Aug2019] Motor-Operated Appliances (Household and Commercial) (R2019) [CSA C22.2#68:2018 Ed.8+U1]
<b>Product:</b>	Hydraulic Power Unit
<b>Models:</b>	YBZ-6D0.8B5F01ALQO



## VERIFICATION OF CONFORMITY

S/N: 013017

No.: **ICR/VC/HM250363**

**Name and address of Applicant**

Daytona Automotive Equipment Inc.  
101 Applewood Dr. Unit 3, Brighton, Ontario. K0K1H0, Canada

**Name and address of manufacturer:**

Acme Industrial Technologies (Nanjing) Limited  
FORTUNE PLAZA, 2703 WEST TOWER, 359 HONGWU ROAD, NANJING, CHINA

**Product name:**

## Vehicle Lift

**Product types:**

LTPTF9, LTPTA10, LTPTO10, LTPTO12, LTPTF12, LTPTO14, LTPTO15, LTPTO18, LTPTP9A, LTPTP10A, LTPTA12, LTPTA14, LTPTA24, RAJ4, RAJ5, RAJ8, RAJ9, RAJ11, RAJ12, LHS7, LMS6, LMATV, LMC16

**Product trademark:**

n/a

Verification was carried within following scope:

Information on the Declaration of Conformity:

Result:      Legislation:      Standard:

✓ MD [2006/42/EC]	EN ISO 12100:2010
	EN 60204-1:2018
	EN 1493:2022
	EN 1494:2000+A1:2008

The assessment process has been carried out in accordance with individual rules and conditions agreed with the applicant. Evaluation has been carried out in accordance with:

**Test report:**

MTZ202503035MD

**Tests conducted by:**

Daytona Automotive Equipment Inc.

**Issue date:**

07.03.2025

**Expiration date:**

06.03.2030

## Remarks:

- VoC was issued on voluntary basis and does not imply meeting all essential requirements listed in Declaration of Conformity.
- For introducing this product on European market may be needed EC/EU-type examination conducted by appropriate Notified Body.



ICR Co. Ltd.  
www.icrqa.com  
www.icrpolska.com  
cert@icrqa.com

Koreyong Jim


CEO, ICR Co., Ltd.



# Daytona

AUTOMOTIVE EQUIPMENT

## LMS6 6,000 lbs MIDRISE SCISSOR LIFT

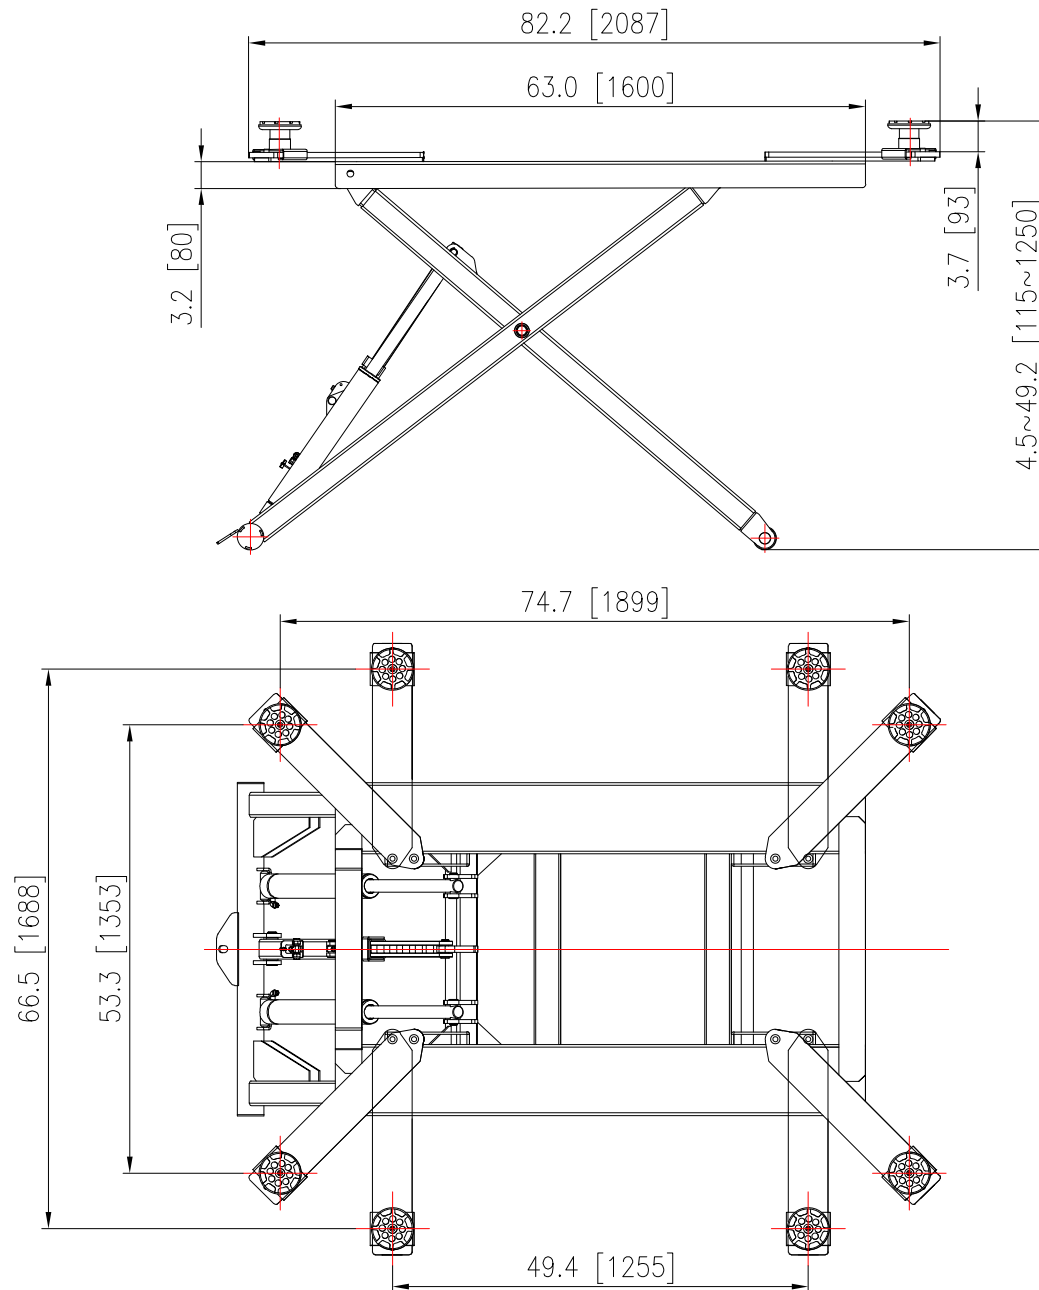

批准生产  
批准人: Du 24年 11月02日  
APPROVED FOR PRODUCTION






Please read through this manual before operation

# INSTALLATION AND OPERATION MANUAL



Your safety our standards

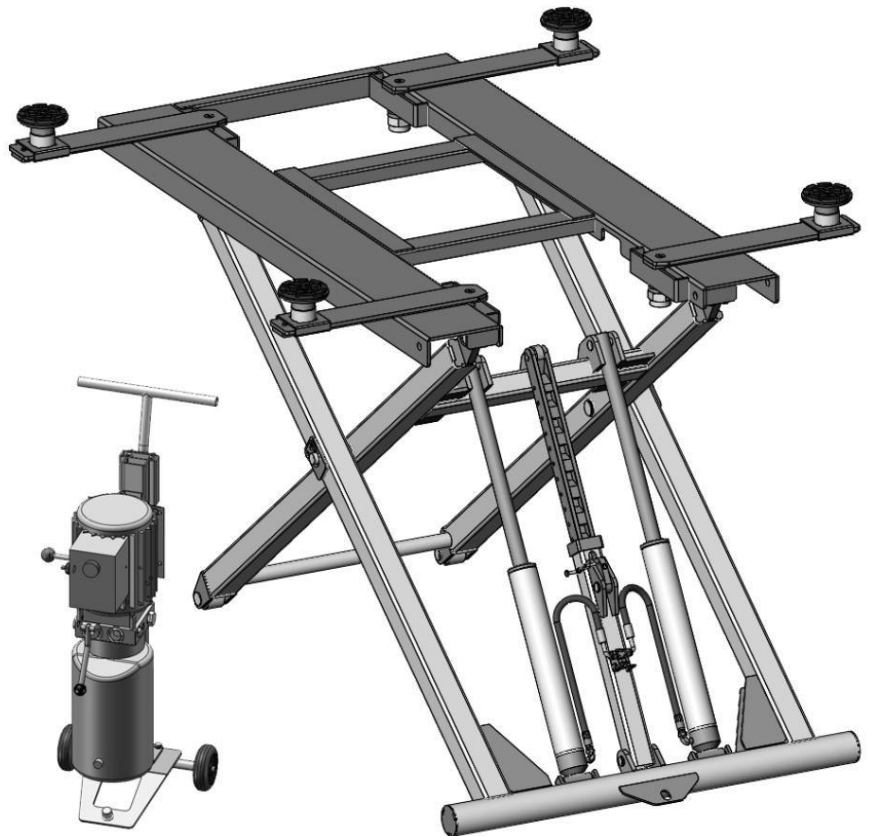

## RECEIVING

The shipment should be thoroughly inspected as soon as it is received. The signed Bill of Lading is acknowledgement by the shipping carrier as receipt of this product as listed in your invoice as being in a good condition of shipment.

If any of these goods listed on this Bill of Lading are missing or damaged, do not accept goods until the shipping carrier makes a notation on the freight bill of the missing or damaged goods. Do this for your own protection.

Keep this operation manual near the machine at all times. Make sure that ALL USERS read this manual.

## BE SAFE

Your new lift was designed and built with safety in mind. However, your overall safety can be increased with proper training and thoughtful operation on the part of the operator. DO NOT operate or repair this equipment without reading this manual and the important safety instructions shown inside. Keep this operation manual near the lift at all times. Make sure that ALL USERS read and understand this manual.


## IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

PLEASE READ THE ENTIRE CONTENTS OF THIS MANUAL PRIOR TO INSTALLATION AND OPERATION. BY PROCEEDING WITH LIFT INSTALLATION AND OPERATION YOU AGREE THAT YOU FULLY UNDERSTAND THE FULL CONTENTS OF THIS MANUAL.

FORWARD THIS MANUAL TO ALL OPERATORS. FAILURE TO OPERATE THIS EQUIPMENT AS DIRECTED MAY CAUSE INJURY OR DEATH.



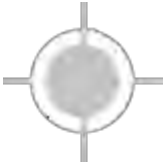

# Contents

General Information .....	2-5
Product Identification.....	6
Packing, Transport, Storage.....	7-8
Product Description.....	9
Technical Specification.....	10-12
Safety .....	13-15
Installation .....	16-20
Operation And Use.....	21-22
Maintenance .....	23-24
Troubleshooting.....	25
Parts List .....	26-29




# Printing Characters and Symbols

Throughout this manual, the following symbols and printing characters are used to facilitate reading:

	Indicates the operations which need proper care
	Indicates prohibition
	Indicates a possibility of danger for the operators
	Indicates the direction of access for motor vehicles to the lift
BOLD TYPE	Important information

	WARNING: before operating the lift and carrying out any adjustment, read <b>carefully chapter 7 “installation” where</b> all proper operations for a better functioning of the lift are shown.
---	--



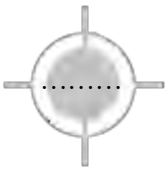

# General Information

This chapter contains warning instructions to operate the lift properly and prevent injury to operators or objects. This manual has been written to be used by shop technicians in charge of the lift (operator) and routine maintenance technician (maintenance operator). The operating instructions are considered to be an integral part of the machine and must remain with it for its whole useful life. Read every section of this manual carefully before operating the lift and unpacking it since it gives helpful information about:

- **Safety of people**
- **Safety of the lift**
- **Safety of lifted vehicles**

The company is not liable for possible problems, damage, accidents, etc., resulting from failure to follow the instructions contained in this manual. Only skilled **professional technicians** shall be allowed to carry out lifting, transport, assembling, installation, adjustment, calibration, settings, extraordinary maintenance, repairs, overhauling and dismantling of the lift. The manufacturer is not responsible for possible damage to people, vehicles or objects if said operations are carried out by unauthorized personnel or the lift is improperly used.

Any use of the machine made by operators who are not familiar with the instructions and procedures contained herein shall be forbidden.

## 1.1 Manual Keeping


For a proper use of this manual, the following is recommended:

- Keep the manual near the lift, in an easily accessible place.
- Keep the manual in an area protected from the damp.
- Use this manual properly without damaging it.
- Any use of the machine made by operators who are not familiar with the instructions and procedures contained herein shall be forbidden.

This manual is an integral part of the lift: it shall be given to the new owner if and when the lift is resold.





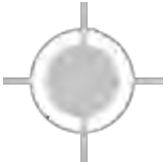

## 1.2 Obligation In Case Of Malfunction



In case of machine malfunction, follow the instructions contained in the following chapters.

## 1.3 Cautions for the Safety of the Operator

Operators must not be under the influence of sedatives, drugs or alcohol when operating the machine.



Before operating the lift, operators must be familiar with the position and function of all controls, as well as with the machine features shown in the chapter **"Operation and use"**

## 1.4 Warnings



Unauthorized changes and/or modifications to the machine relieve the manufacturer of any liability for possible damages to objects or people. Do not remove or make inoperative the safety devices, this would cause a violation of safety at work laws and regulations.




Any other use which differs from that provided for by the manufacturer of the machine is strictly forbidden.



The use of non-genuine parts may cause damage to people or objects



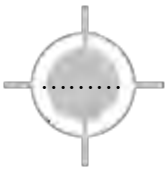


# DECLARATION OF WARRANTY AND LIMITATION OF LIABILITY

The manufacturer has paid proper attention to the preparation of this manual. However, nothing contained herein modifies or alters, in any way, the terms and conditions of manufacturer agreement by which this lift was acquired, nor increase, in any way, manufacturer' s liability to the customer.

## TO THE READER

Every effort has been made to ensure that the information contained in this manual is correct, complete and up-to date. The manufacturer is not liable for any mistakes made when drawing up this manual and reserves the right to make any changes due the development of the product, at any time.



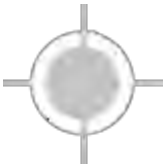

# Product Identification

Machines may be updated or slightly modified from an aesthetic point of view and, as a consequence, they may present different features from these shown, this without prejudicing what has been described herein.


## 2.1 Warranty Certificate

The warranty is valid for a period of 12 months starting from the date of the purchase invoice. The warranty will come immediately to an end when unauthorized cations to the machine or parts of it are carried out.

## 2.2 Technical Servicing

For all servicing and maintenance operations not specified or shown in these instructions, contact your Dealer where the machine has been bought or the Manufacturer’ s Commercial Department. Only skilled personnel who are familiar with the lift and this manual shall be allowed to carry out packing, lifting, handling, transport and unpacking operations.



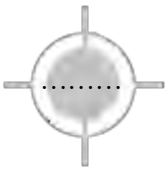


# Packing, Transport, Storage

## 3.1 Packing

The packing of the lift is delivered in following components:

- N. 1 base units packed in a plywood box, wrapped up in non-scratch material, including some accessories
- N. 1 portable packed in a cardboard boxes

The average weight of the package is 400kg.

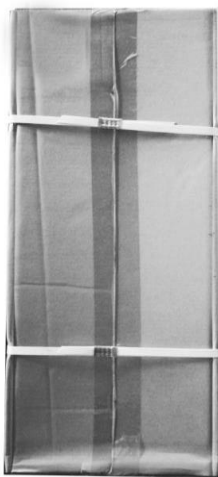


Power unit



Base units packed and some accessories



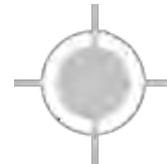

### 3.2 Lifting and Handling

When loading/unloading or transporting the equipment to the site, be sure to use suitable loading (e.g. cranes, trucks) and hoisting means. Be sure also to hoist and transport the components securely so that they cannot drop, taking into consideration the package's size, weight and center of gravity and its fragile parts.



Hoist and handle only one package at a time

### 3.3 Storage and Stacking Of Packages


Packages must be stored in a covered place, out of direct sunlight and in low humidity, at a temperature between -10°C and +40°C. Stacking is not recommended: the package's narrow base, as well as its considerable weight and size make it difficult and hazardous.

### 3.4 Delivery and Check of Packages

When the lift is delivered, check for possible damages due to transport and storage; verify that what is specified in the manufacturer's confirmation of order is included. In case of damage in transit, the customer must immediately inform the carrier of the problem. Packages must be opened paying attention not to cause damage to people (keep a safe distance when opening straps) and parts of the lift (be careful the objects do not drop from the package when opening).





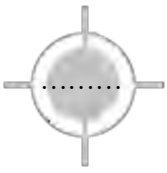



# Product Description

## Lift Description

This portable lift has been designed for the lifting of motor-vehicles for maintenance. All mechanical frames, such as platforms, extensions, base frames and arms have been built in steel plate to make the frame stiff and strong while keeping a low weight.

This chapter describes the lift's principal elements, allowing the user to be familiar with the machine. As shown, the lift is composed of a frame (1), N.4 lifting arms (2), N.2 pair of scissors (3) and N.2 cylinders (4), can be movable by means of wheels (5). The lifting and lowering motion is carried out by operation of the lifting button and the lowering lever on the control unit (6). The mechanical safety (7) operating manually is installed between 2 cylinders.

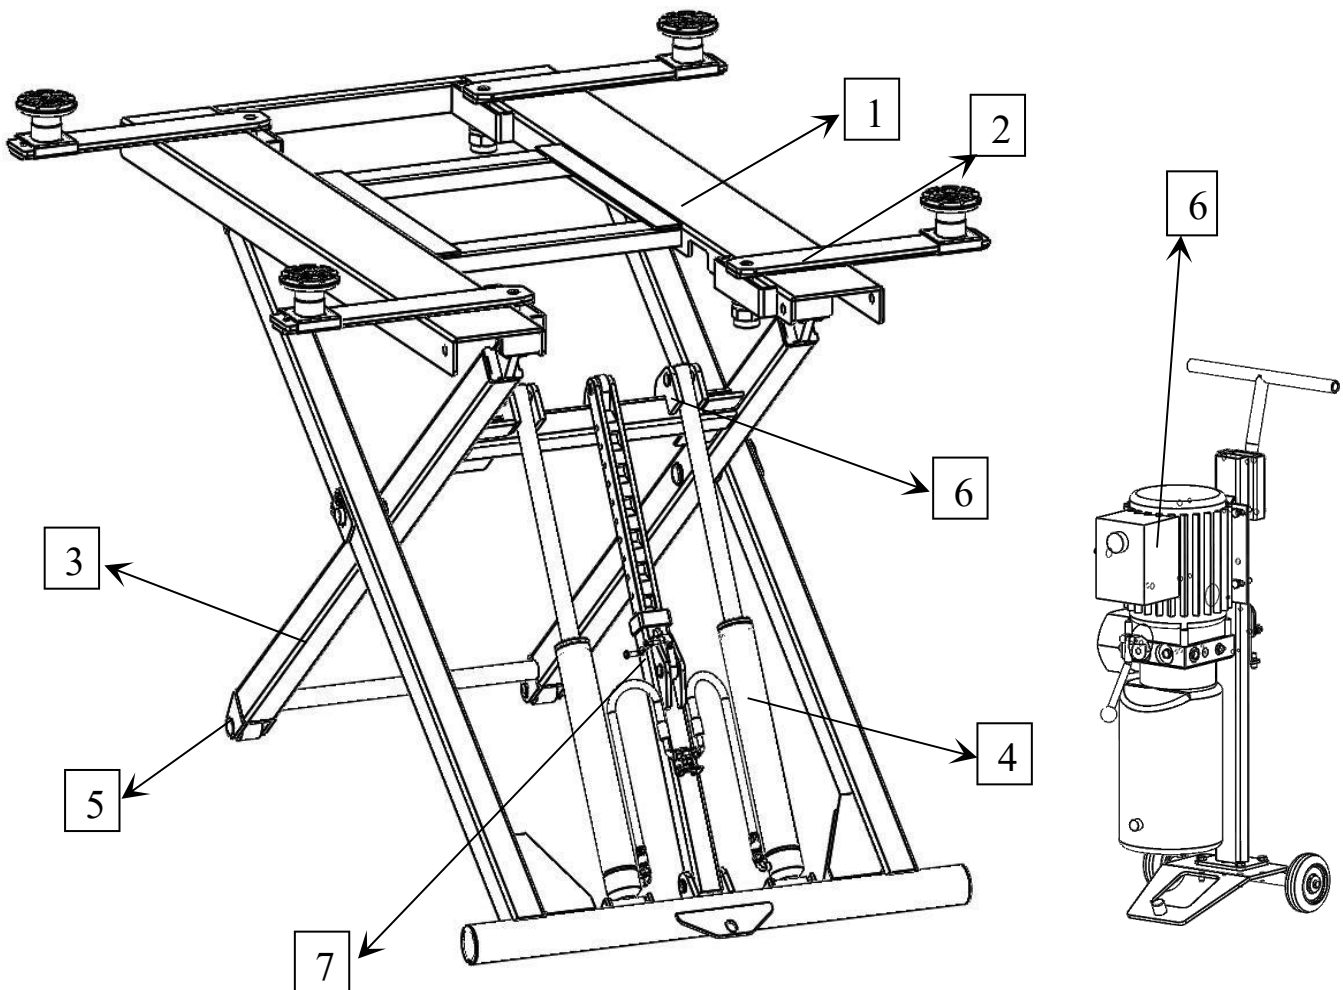


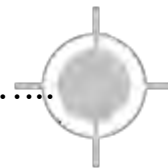


# Technical parameters

## 5.1 Size and Main Features

Capacity	2800KG/6100 LBS
Max. lifting height	48.23"/1225mm
Min. lowered height	4.53"/115mm
Max. length between lifting pads	63.98"/1625mm
Lifting time	60s
Lowering time	40s
Noise level	80 dB(A)/1m
Working temperature	-10 °C ÷ 40 °C
weight of package	3059 lb/387.6kg

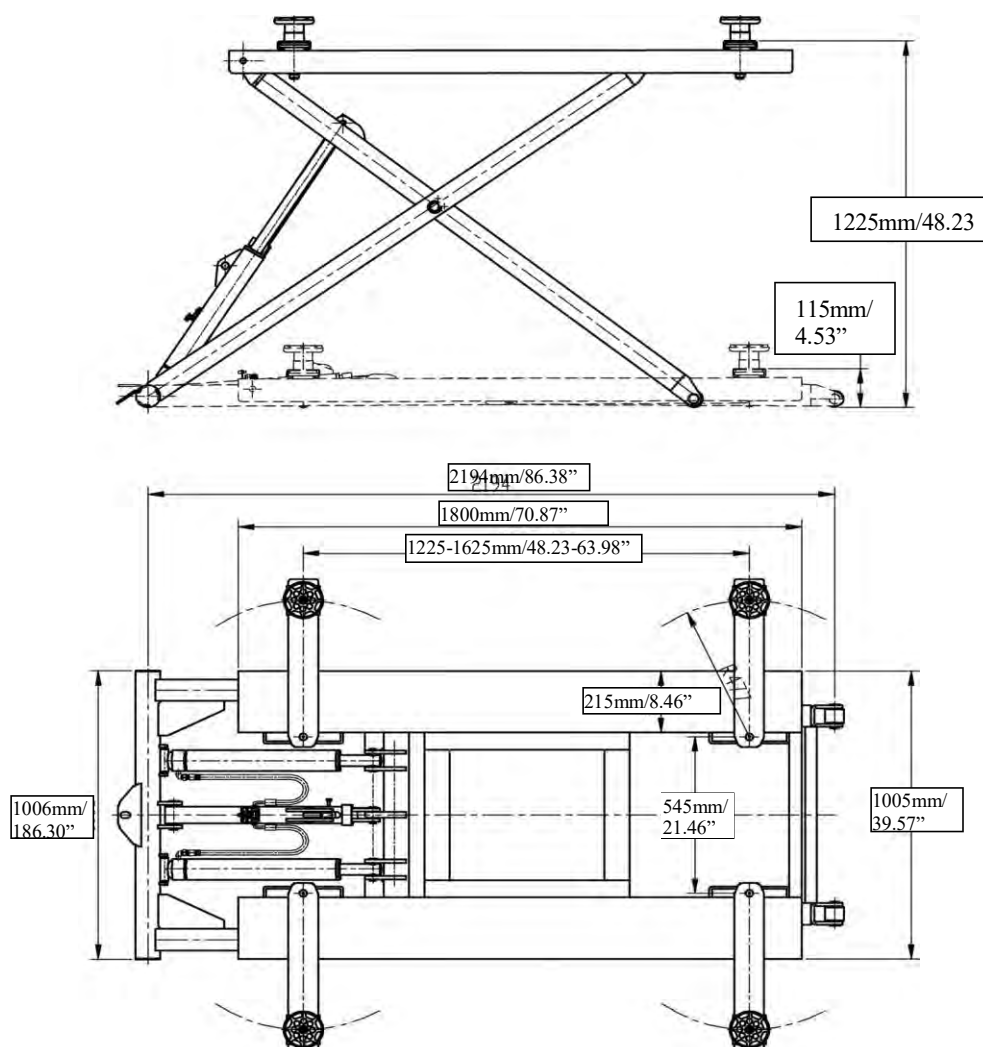

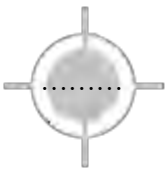



## 5.2 Electric Motor

Voltage	110V-1Ph
Power	2.2 KW
N° Poles	4
Speed	1700 rpm
Motor enclosure type	B14
Insulation class	IP 54

The motor direction of rotation is shown in the label placed on the motor. Before use of the lift, make sure to check if the motor specification shown in the nameplate of the motor conforms to the local electric supply. If there is over 10% fluctuation on the electrical power supply, it is suggested to use the voltage stabilizer to protect the electrical components and system from overloading

## 5.3 Hydraulic Power

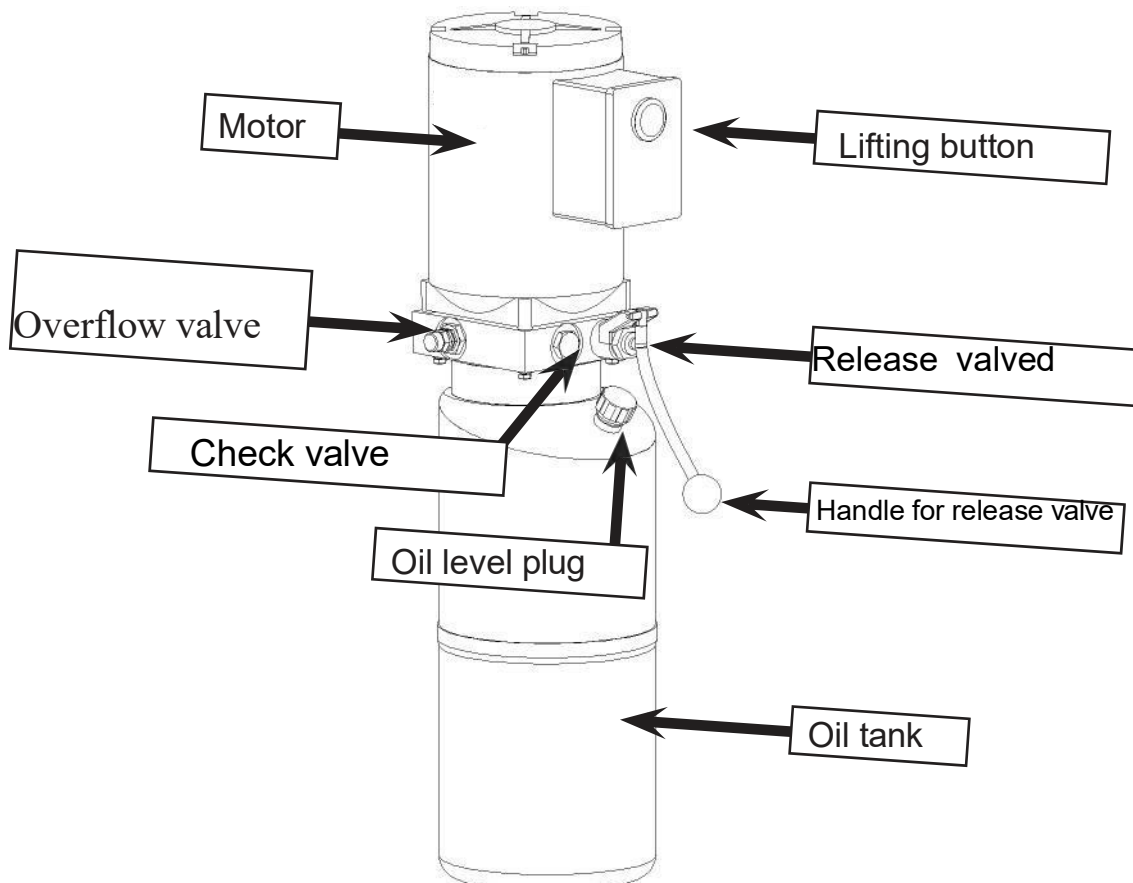

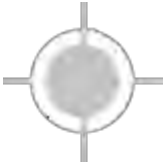


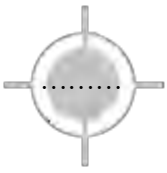
## 5.4 Oil

Use wear proof oil for hydraulic drive, in conformity with *ISO 6743/4* rules (HM class). The oil with features similar to those shown in the table is recommended.

Test standards	Features	Value
ASTM D 1298	Density 20°C	0.8 kg/l
ASTM D 445	Viscosity 40°C	32 cSt
ASTM D 445	Viscosity 100°C	5.43 cSt
ASTM D 2270	Viscosity index	104 N°
ASTM D 97	Pour point	~ 30 °C
ASTM D 92	Flash point	215 °C
ASTM D 644	Neutralization number	0.5 mg KOH/g

	Change hydraulic oil at 1 year intervals
---	--





# Safety

Read this chapter carefully and completely because it contains important information for the safety of the operator and the person in charge of maintenance.

	<p>The lift has been designed and built for lifting vehicles and making them stand above level in a closed area. Any other use is forbidden.</p> <p>The manufacturer is not liable for possible damages to people, vehicles or objects resulting from an improper or unauthorized use of the lift.</p>
--	--

For operator and people safety, a safety area at least 1m free away from the lift must be vacated during lifting and lowering. The lift must be operated only from the operator' s control site in this safety area.

Operator' s presence under the vehicle, during working, is only admitted when the vehicle is lifted and platforms are not running.

	<p>Never use the lift when safety devices are off-line.</p> <p>People, the lift and the vehicles lifted can be seriously damaged if these instructions are not followed.</p>
--	--

## 6.1 General Warnings


The operator and the person in charge of maintenance must follow accident-prevention laws and rules in force in the country where the lift is installed

They also must carry out the following:

- Neither remove nor disconnect hydraulic, electric or other safety devices;
- Carefully follow the safety indications applied on the machine and included in the manual;
- Observe the safety area during lifting;
- Be sure the motor of the vehicle is off, the gear engaged and the parking brake put on;
- Be sure only authorized vehicles are lifted without exceeding the maximum lifting capacity;
- Verify that no one is on the platforms during lifting or standing.





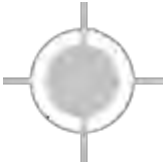

## 6.2 Risks during Vehicle Lifting

To avoid overloading and possible breaking, the following safety devices have been used:

- A special design of the hydraulic system, in case of pipeline failure, to prevent sudden lift lowering.



**The overflow valve maximum pressure has been preset by the manufacturer to a proper pressure. DO NOT try to adjust it to overrun the rated lifting capacity.**

## 6.3 Risks for People

All risks the personnel could run, due to an improper use of the lift, are described in this section.

## 6.4 Personnel Crushing Risks

During lowering of runways and vehicles, personnel must not be within the area covered by the lowering trajectory. The operator must be sure no one is in danger before operating the lift.


## 6.5 Bumping Risk

When the lift is stopped at relatively low height for working, the risk of bumping against projecting parts occurs.

## 6.6 Risk of The Vehicle Falling From The Lift

Vehicle falling from the lift can be caused when the vehicle is improperly placed on platforms, and when its dimensions are incompatible with the lift or by excessive movement of the vehicle. In this case, keep immediately away from the working area.



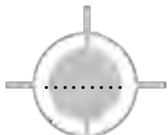

6.7

## Slipping Risks

The risk of slipping can be caused by oil or dirt on the floor near the lift.



Keep the area under and around the lift clean. Remove all oil spills.

## 6.8 Electrocuting Risks

Avoid use of water, steam, and solvent, varnish jets in the lift area where electric cables are placed and, in particular, next to the electric panel.

## 6.9 Risks Resulting from Improper Lighting

Make sure all areas next to the lift are well and uniformly lit, according to local regulations.

## 6.10 Risks of Breaking Component during Operation

Materials and procedures, suitable for the designed parameters of the lift, have been used by the manufacturer to build a safe and reliable product. Operate the lift only for the use it has been designed for and follow the maintenance schedule shown in the chapter “Maintenance” .


## 6.11 Risks for Unauthorized Uses

The presence of unauthorized persons next to the lift and on the platforms is strictly forbidden during lifting as well as when the vehicle has been already lifted.



Any use of the lift other than that herein specified can cause serious accidents to people in close proximity of the machine.



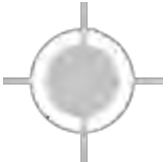

# Installation



Only skilled technicians, appointed by the manufacturer, or by authorized dealers, must be allowed to carry out installation. Serious damage to people and to the lift can be caused if installations are made by unskilled personnel.


## 7.1 Checking For Place Suitability

The lift has been designed to be used in covered and sheltered places free of overhead obstructions. The working place must not be next to washing areas, painting workbenches, solvent or varnish deposits. The relevant standards of the local Health and Safety at Work regulations, for instance, with respect to minimum distance to wall or other equipment, escapes and the like, must be observed. All areas next to the lift must be well and uniformly lit.

## 7.2 Concrete Surface


The lift must be placed on the concrete surface sufficiently resistant. The surface must be suitable for bearing maximum stress values, also in unfavorable working conditions. The surface must be perfectly leveled.



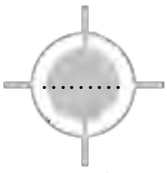


## 7.3 Hydraulic System Connection and Unlock Line Connect

- Connect hydraulic hoses referring
- Tighten fittings thoroughly.


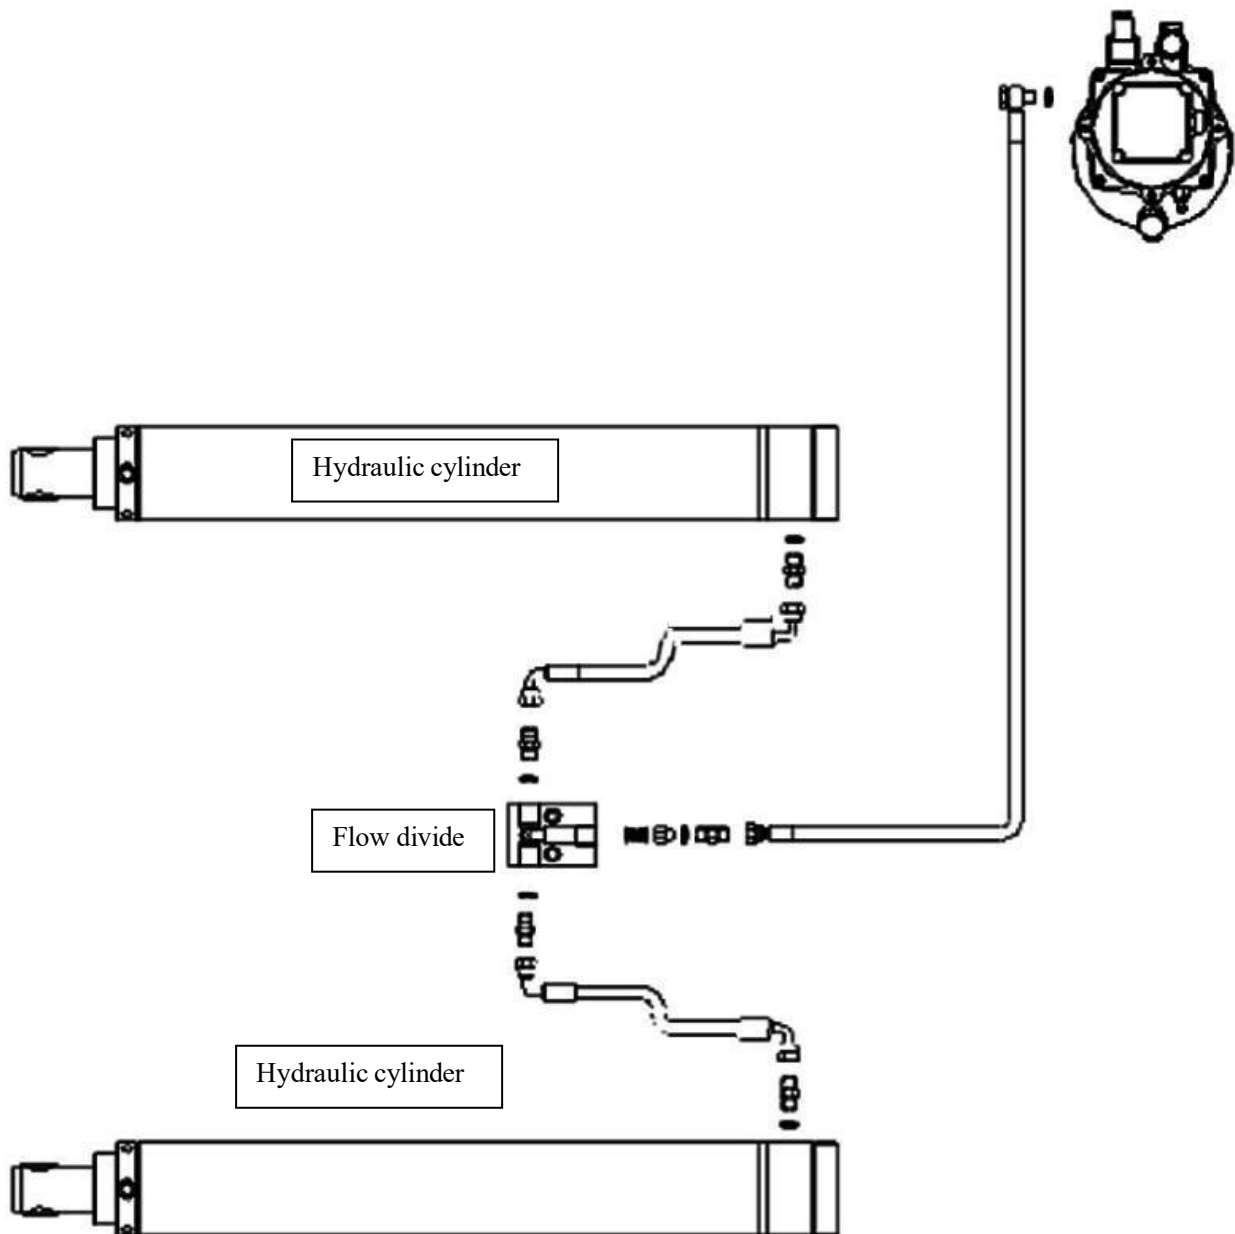


Hydraulic Connections




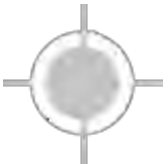

**7.4 Reference diagram Connect Unlock Line**

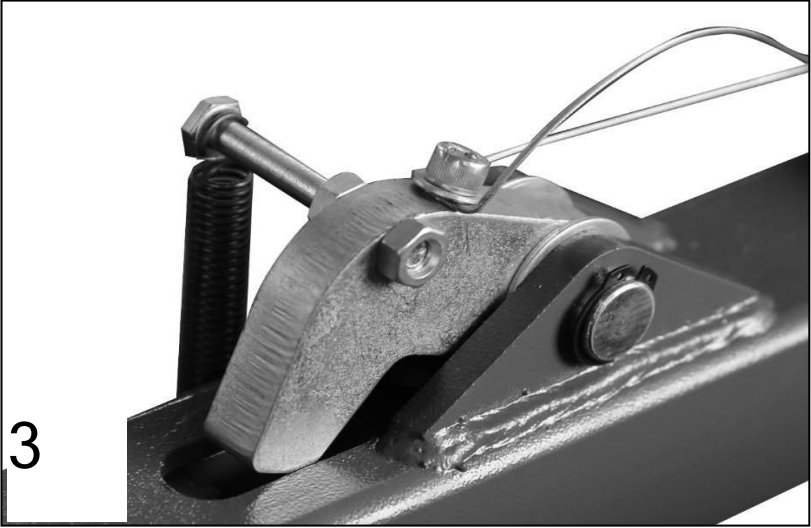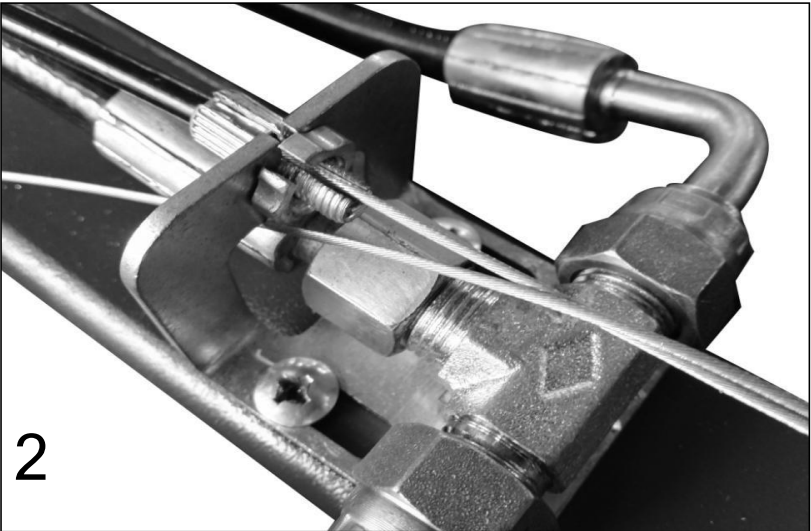



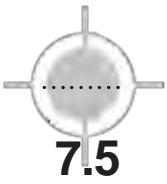

## 7.5 ..... Make the Electrical Hookup To Hydraulic Power Unit



The hookup work must be carried out by a qualified electrician. Make sure that the power supply is right.

Make sure the connection of the phases is right. Improper electrical hook-up can damage motor and will not be covered under warranty.

DO NOT run the hydraulic unit without oil. Damage to pump can occur.

The power unit must be kept dry.


- Fix the control panel onto the power-side column using the included screws.
- Make the to the power unit the attached using the included electric cable.
- Make sure the connection of the phases is right and lift is grounded.

## 7.6 Start

- Make sure all pins and bolts to insure proper mounting
- Make sure the electrical system feeding voltage is equal to that specified in the nameplate on the motor
- Make sure the electric connections are in compliant with diagrams
- Make sure no leakage or blow-up in hydraulic line
- Make sure the working area is free from people and objects
- Grease sliding seats of blocks placed under platforms and on bases
- Pour oil in the tank (*about 5 liters more than one time*)
- Verify that the control unit is powered

Verify that the motor direction of rotation is that shown on the label by pushing the lifting button. IF MOTOR GETS HOT OR SOUNDS PECULIAR, STOP IMMEDIATELY AND RECHECK THE ELECTRIC CONNECTIONS



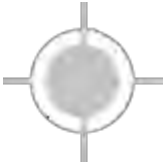

## 7.7 Bleeding



Do not install the maximum working height limit switch before bleeding the hydraulic line.

During this procedure, DO NOT attempt to raise the lift with any load.

- Raising the lift slowly by pressing the lifting button until cylinders bottom out and the lift stops. DO NOT continue pressing button after lift reaches full height. Damage to motor can occur if continued.
- Lower the lift completely by pressing the lowering lever.
- Repeat raise and lower the lift completely at least 5 times to equalize the oil pressure in each cylinder.

## 7.8 Checks Less Load



During this procedure, observe all operating components and check for proper installation and adjustment. DO NOT attempt to raise vehicle until a thorough operation check has been completed.

**Carry out two or three complete cycles of lowering and lifting and check:**

- the safety devices for proper operation
- proper oil level in the tank
- no leakage and blow-by in hydraulic line
- cylinder for proper operation
- the lift for reaching its maximum height

## 7.9 Checking With Load




**WARNING:** please follow carefully the instructions in the coming paragraph for avoiding damages on the lift.

**Carry out two or three complete cycles of lowering and lifting and check:**

- Repeat the 7.7 section

Check no strange noise during lifting and lowering



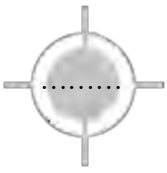

# Operation and Use





Never operate the lift with any person or equipment below. Never exceed the rated lifting capacity.

Always ensure that the lift safety is locked before any attempt is made to work on or near the vehicle.

Do not permit the power unit to get wet!

## 8.1 Controls

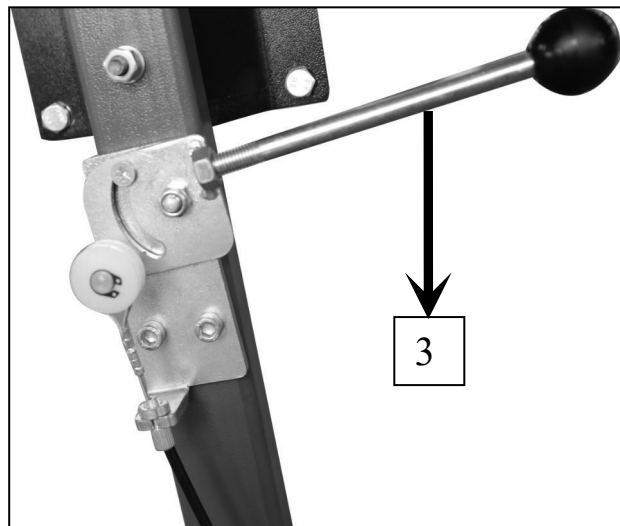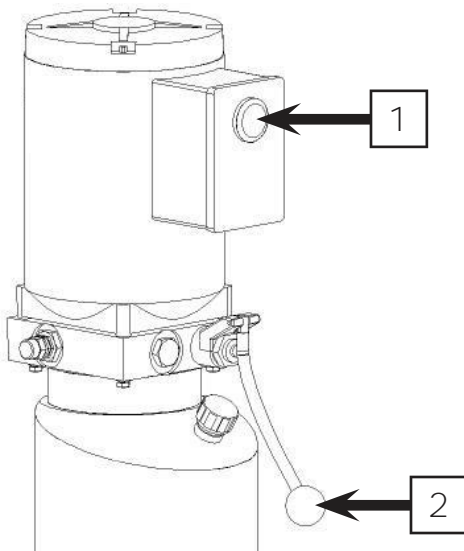

### Controls for operating the lift are:


#### LIFTING BUTTON (1)

When pressed, the motor is powered to operate the hydraulic circuit to raise the lift.

#### LOWERING LEVER (2)

- When pressed, the hydraulic fluid is released from the cylinder to the oil tank: the lift starts to descend.



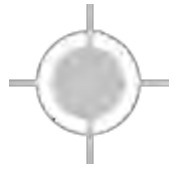

### SAFETY RELEASE LEVER (3)

- When pressed, the mechanical safety is released.


## 8.2 To Raise the Lift

- Drive the vehicle at the center of the lift. Check to make sure that the vehicle is secured.
- Position the lifting arms and adaptors in the proper position indicated by the vehicle manufacturer;
- Press the lifting button to raise the vehicle;
- To rest the lift in standing position at the desired height by releasing the lifting button;
- Press the lowering lever to lower the lift to engage the mechanical safety;
- Always ensure that the lift rests on the safety before any attempt is made to work on or near the vehicle.

## 8.3 To Lower the Lift

- Be sure the safety area is free of people and objects;
- Raise the lift a little bit by pushing the lifting button to clear off the safety;
- Release the safety by operating the manual release lever;
- Continue pressing the lowering lever until the lift is lowered completely.



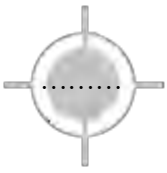

# Maintenance



Only trained personnel who knows how the lift works, must be allowed to service the lift.

To service properly the lift, the following has to be carried out:

- Use only genuine spare parts as well as equipment suitable for the work required;
- Follow the scheduled maintenance and check periods shown in the manual;
- Discover the reason for possible failures such as too much noise, overheating, oil blow-by, etc.



Before carrying out any maintenance or repair on the lift, disconnect the power supply, padlock the general switch and keep the key in a safe place to prevent unauthorized persons from switching on or operating the lift.

## 9.1 Ordinary maintenance

The lift has to be properly cleaned at least once a month using self-cleaning clothes. Lubricate all pivot pins at least once a week.




The use of water or inflammable liquid is strictly forbidden.

Be sure the rod of the hydraulic cylinders is always clean and not damaged since this may result in leakage from seals and, as a consequence, in possible malfunctions.






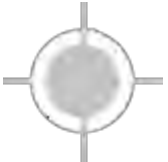

## 9.2 Periodic Maintenance

Every 3 months	Hydraulic circuit	<ul style="list-style-type: none"><li>• check oil tank level; refill with oil, if needed;</li><li>• check the circuit for oil leakage.</li><li>• check seals for proper conditions and replace them, if necessary;</li></ul>
	Foundation bolts	<ul style="list-style-type: none"><li>• check bolts for proper tightening</li></ul>
	Hydraulic pump	<ul style="list-style-type: none"><li>• verify that no noise changes take place in the pump when running and check fixing bolts for proper tightening</li></ul>
	Safety system	<ul style="list-style-type: none"><li>• check safety devices for proper operation</li></ul>
Every 6 months	Oil	<ul style="list-style-type: none"><li>• check oil for contamination or ageing. Contaminated oil is the main reason for failure of valves and shorter life of gears pumps</li></ul>
Every 12 months	General check	<ul style="list-style-type: none"><li>• verify that all components and mechanisms are not damaged</li></ul>
	Electrical system	<ul style="list-style-type: none"><li>• a check of the electrical system to verify that motor, limit switch and control panel operate properly must be carried out by skilled electricians</li></ul>
	Oil	<ul style="list-style-type: none"><li>• empty the oil tank and change the hydraulic oil</li></ul>



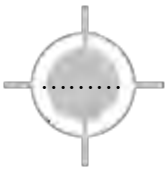


# Troubleshooting


A list of possible troubles and solutions is given below.


Trouble:	Possible Cause:	Solution:
The lift does not work	The main switch is not turned	Turn the switch on
	There is no power	Check Power on to restore if necessary
	The electrical wires are disconnected	Reconnect
	Fuses are blown	Replace
The lift does not raise	The motor direction of rotation is not correct	Interchange the two phases on the main switch
	The oil in the hydraulic unit is not sufficient	Add some hydraulic oil
	Presences of air in the hydraulic circuit	Bleed the hydraulic system
	The UP button is faulty	Check UP button and connection for proper operation. Replace, if needed
	The maximum pressure valve is faulty	Check and clean if dirty or replace if needed
	The lowering valve is faulty	Check and clean if dirty or replace if faulty
	The pump filter is dirty	Check and clean if needed.
	The pump suction is blown	Check the seal and replace if needed
The platforms are not leveled	Oil leakages in hydraulic circuit	Check the circuit for any leakage
The lift does not lower when the lowering lever is	The lowering valve is faulty	Check and clean if dirty or replace if faulty
The lift does not lift or lower smoothly	Leakages or presences of air into hydraulic circuit	Bleed the hydraulic system
	The pump filter is dirty	Check and clean if needed
	The pump suction is blown	Check the seal and replace if needed



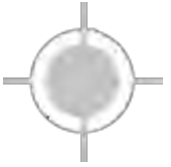


# Parts List

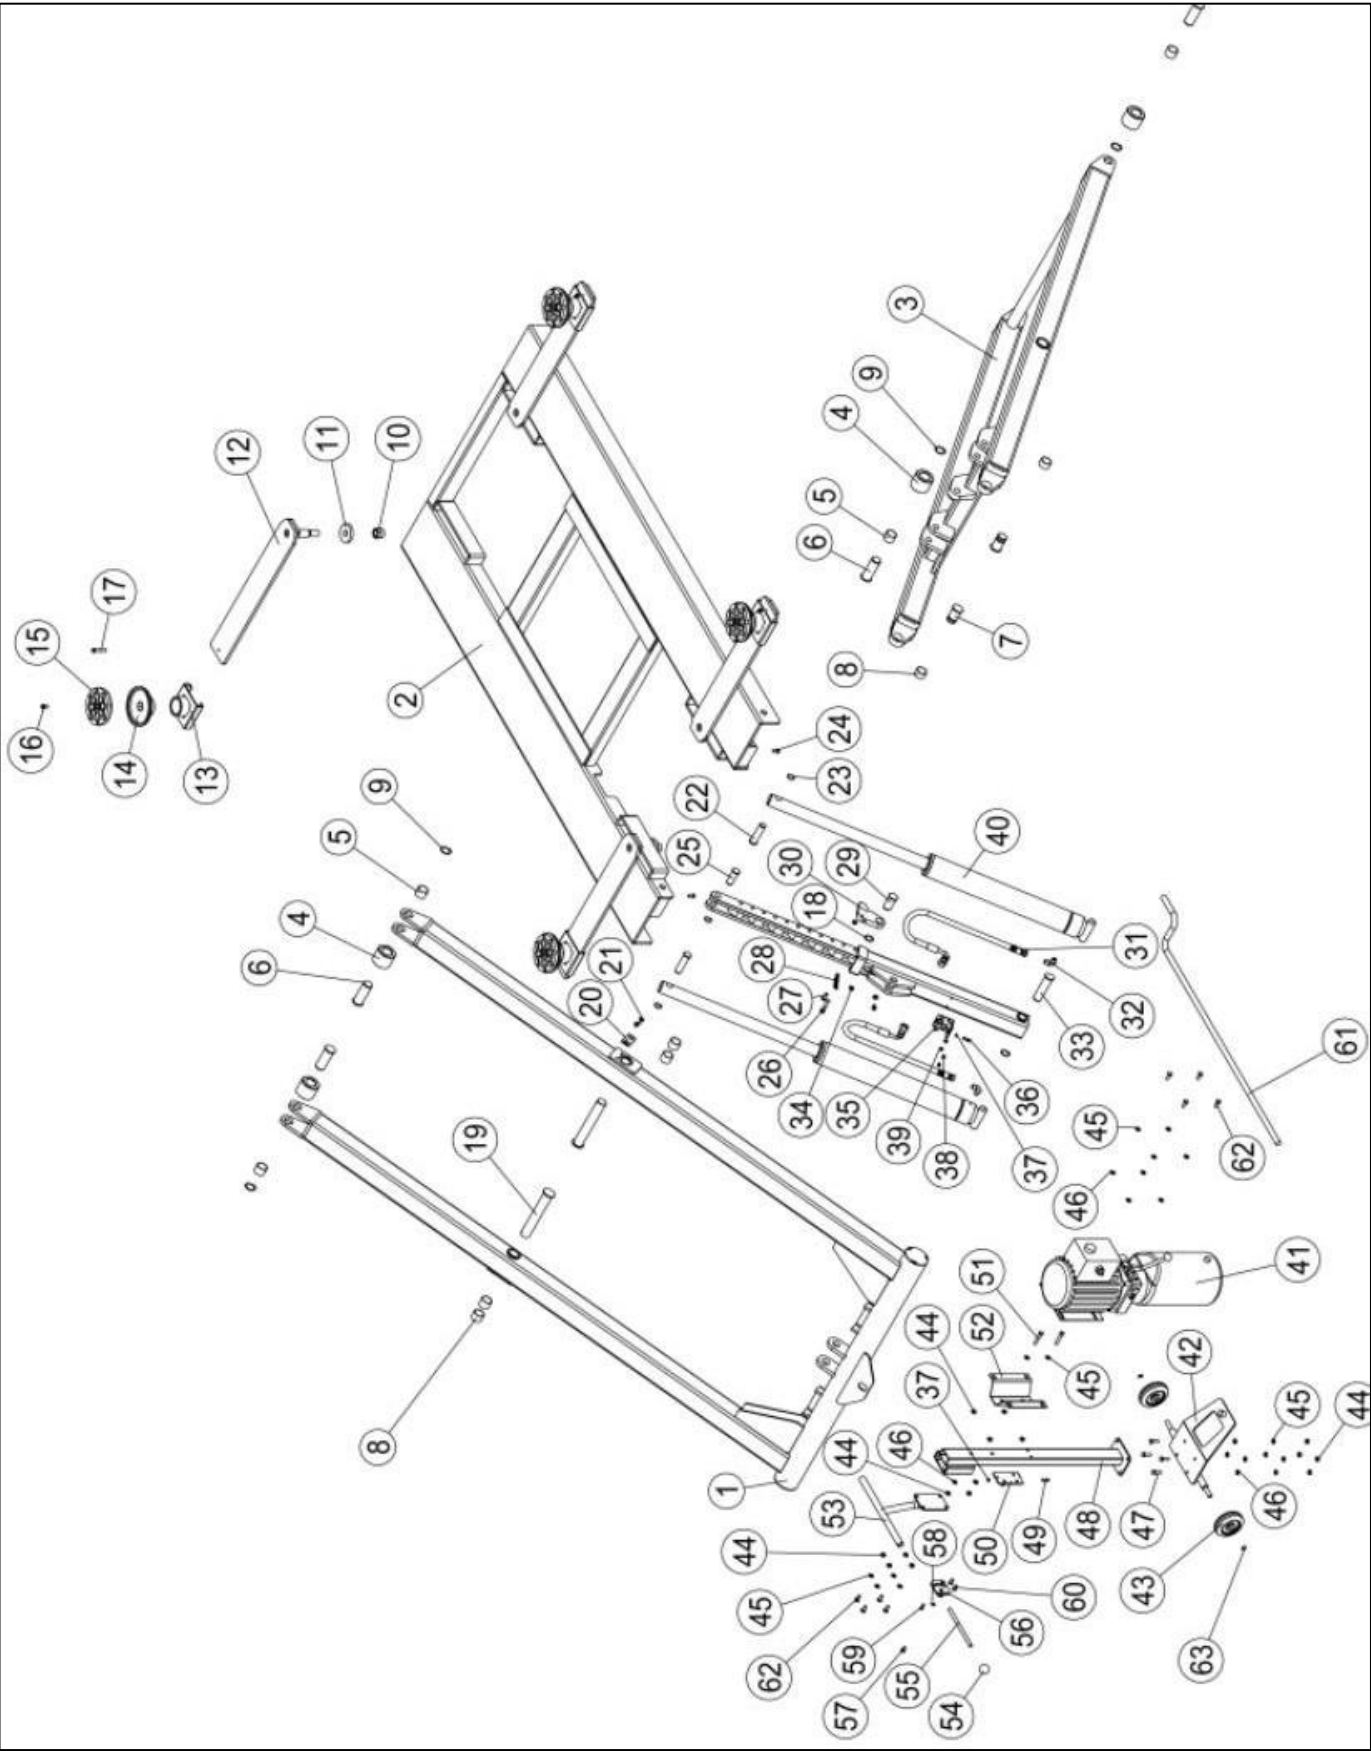

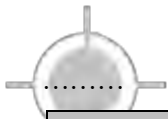



Nos.	Part Nos.	Name	Quantity
1		Outside arm welding	1
2		Top plate welding	1
3		Internal arm welding	1
4		Idler wheel	4
5	SF-3050	Oilless bearing	4
6		Roller fixed shaft	4
7		Fixed shaft on arm	2
8	SF-3020	Oilless bearing	6
9	Φ30	The spring for axis	4
10	M20	Self-locking nut	4
11		Pad	4
12		Rotary arm welding	4
13		Slide tray stand welding	4
14		Tray	4
15		Rubber pallet	4
16	M10X20	Inside hexagonal bolt	4
17	M8X10	Inside hexagonal bolt	4
18	Φ25	The spring for axis	2
19		Arm center shaft	2
20		Center shaft baffle	2
21	M8X8	Countersunk bolt	4
22		Cylinder shaft	2
23	Φ20	The spring for axis	2
24	M8X10	Jackscrew	2
25		Fixed axis on locking teeth	1
26	M8X45	Outer hexagon bolt	1
27	M8X20	Outer hexagon bolt	1
28		Tension spring	1
29		Lock plate fixed shaft	1
30		Lock plate	1
31	M16X1.5	620mm length oil tube(one bent and one straight)	2
32	ZG1/4-M16X1.4	90°bend	2
33		Fixed shaft under lock bar	1
34	M8	Hex nut	2
35	M16	Oil tubing tee weld assembly	1
36	M8	Unlock the wire rope fastener (short)	1
37	M8	Hexagon thin nut	2
38	M8X12	Umbrella head bolt	2
39	Φ8	Flat washer	2
40		Cylinder parts	2
41		Motor assembly	1
42		Small moving cart plate	1
43		Wheel	2
44	M8	Hex nut	14
45	Φ8	Spring washer	14
46	Φ8	Flat washer	14
47	M8X30	Outer hexagon bolt	4
48		Small moving cart column welding	1
49	M8	Unlock the wire rope fastener (long)	1
50		Unlocking fixed plate	1
51	M8X45	Outer hexagon bolt	2
52		Motor mounting plate	1
53		Small moving cart arm welding	1
54	M10	Ball knob	1
55	M10	Unlock moving rod	1
56		Unlocking plate welding	1
57	M8X10	Countersunk bolt	1
58	Φ10	The spring for axis	1
59	M6X16	Inside hexagonal bolt	1
60	M8X10	Inside hexagonal bolt	2
61	M16X1.5	3500mm length oil tube(one bent and one straight)	1
62	M8X20	Inside hexagonal bolt	4



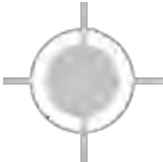

# Hydraulic Power Unit List

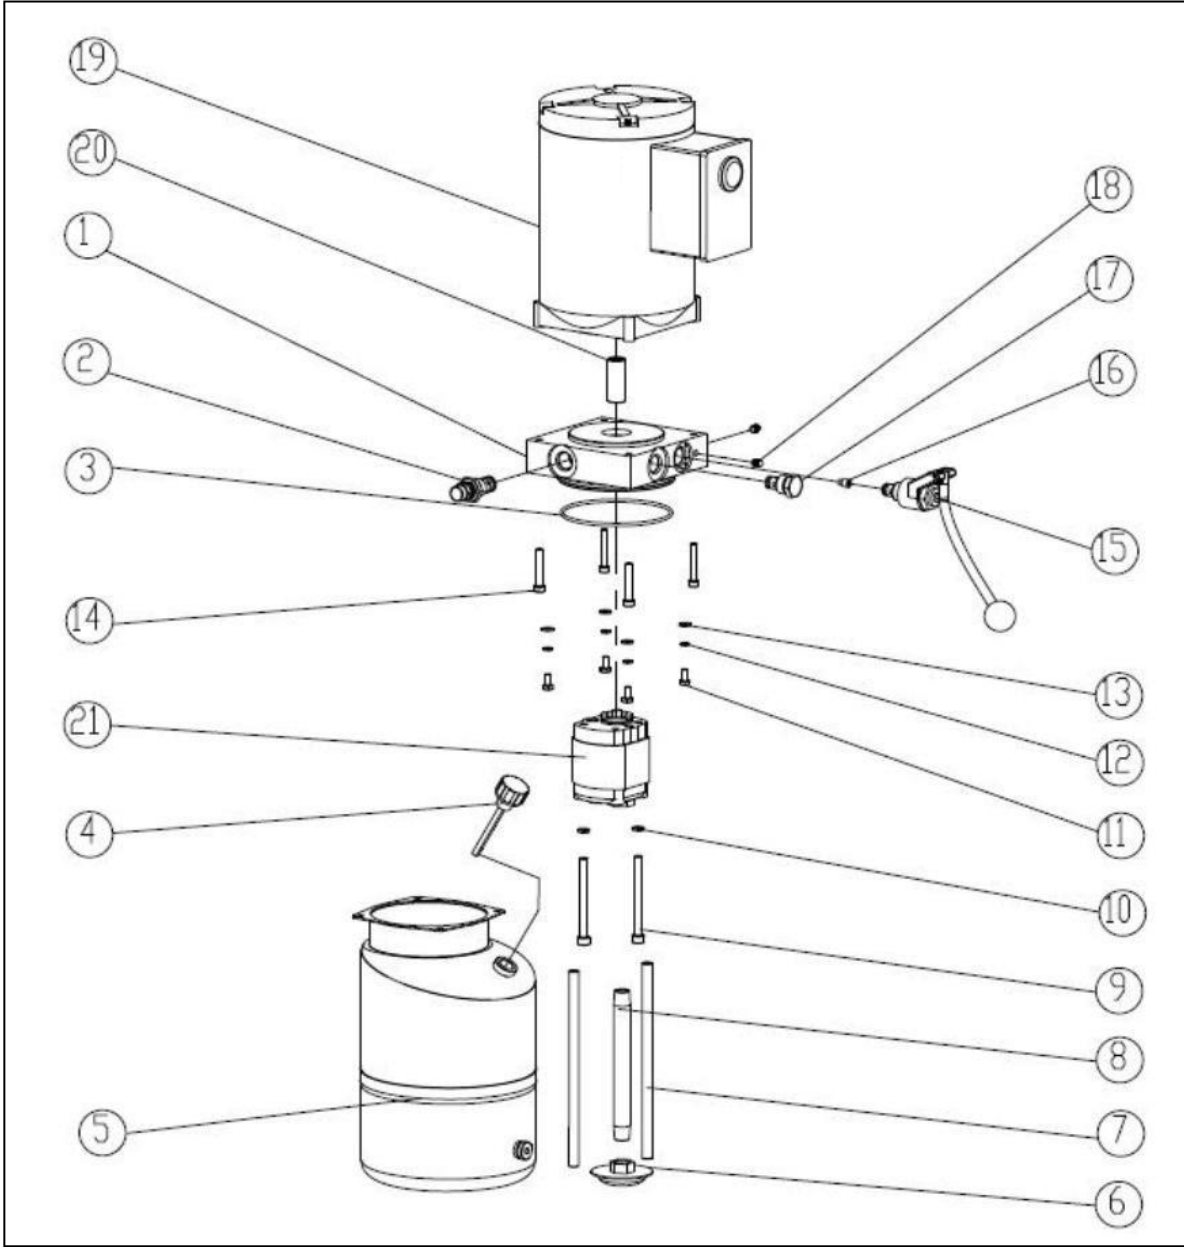

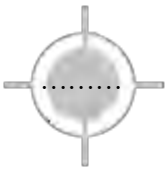

Nos.	Name	Quantity
1	Manifold	1
2	Pressure overload valve(Overflow valve)	1
3	O-ring	1
4	Oil level plug	1
5	Oil tank	1
6	Oil filter	1
7	Oil returning pipe	1
8	Oil suction pipe	1
9	Screw	2
10	Spring washer	2
11	Screw	4
12	Spring washer	4
13	Washer	4
14	Screw	4
15	Manual lowering valve(Release valved)	1
16	Special screw	1
17	Non-return valve (Check valve)	1
18	Plug	2
19	Moto	1
20	Joint	1
21	Gear pump	1







Daytona Automotive Equipment  
101 Applewood Drive  
Brighton ON K0K1H0  
Local: 613 475 5400  
Toll Free: 866 219 9991